



FujiFilm FinePix XP10SE Front Cover Replacement

This guide will help you to remove and replace the front case/cover of the FujiFilm FinePix XP10SE Camera.

Written By: Bryan



INTRODUCTION

This guide demonstrates how to remove and replace the front cover of the FujiFilm FinePix XP10SE Camera in order to protect the device.



TOOLS:

- [T5 Torx Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Front Cover



- Use a screwdriver to remove the four screws from the top and bottom of the camera. Remove the screws securing the lanyard as well.
- Use a T5 Torx bit to secure the exterior decorative cover of the device.

Step 2



- Use a plastic opening tool to detach the case.

Step 3



- Use the plastic opening tool to cautiously pry the casing off of the camera.

Step 4



- Carefully slide the case to the left. Avoid cracking the case on the lens.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-08-29 05:23:02 PM.